


KAMINIO

MATTI

KAMINEINHEIT

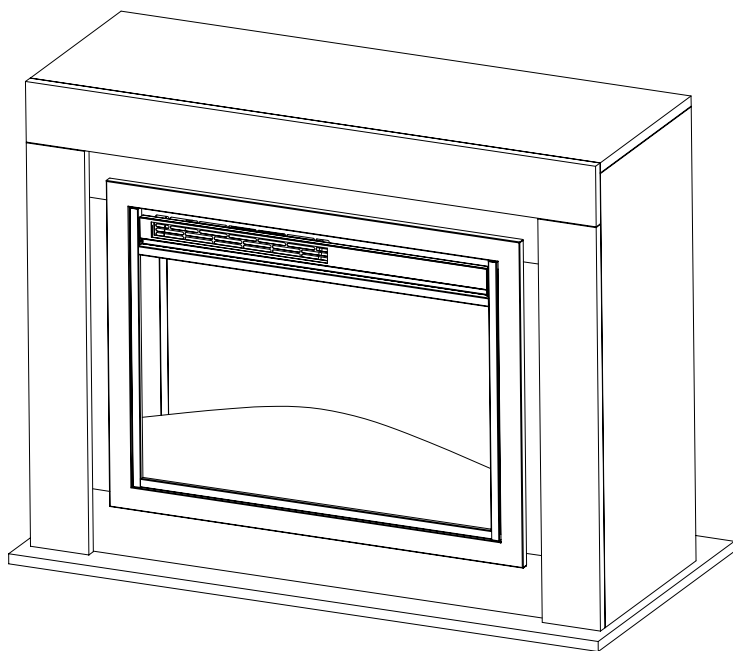

KAMINEINHEIT
FIREPLACE UNIT
UNITÀ CAMINO
UNITÉ DE CHEMINÉE
UNIDAD DE CHIMENEA

BEDIENUNGSANLEITUNG
INSTRUCTION MANUAL
ISTRUZIONI PER L'USO
INSTRUCTIONS D'UTILISATION
INSTRUCCIONES DE OPERACIÓN

DE | EN | IT | FR | ES



Download aktuelle Bedienungsanleitung
Download current instruction manual
Scarica le istruzioni per l'uso
Télécharger les Instructions d'utilisation
Descargar las Instrucciones de operación

| | | |
|-----------|---|-----------|
| DE | BEDIENUNGSANLEITUNG | 04 |
| EN | INSTRUCTION MANUAL | 25 |
| IT | ISTRUZIONI PER L'USO | 45 |
| FR | INSTRUCTIONS D'UTILISATION | 66 |
| ES | INSTRUCCIONES DE OPERACIÓN | 87 |



Dieser Artikel wird idealerweise von 2 Personen montiert.

This item is ideally installed by 2 people.

Questo articolo è ideale per essere assemblato da 2 persone.

Cet article doit idéalement être monté par deux personnes.

Este artículo se monta idealmente por 2 personas.

SAFETY INSTRUCTIONS:

- Read all instructions before using this appliance.
- Use this electric fireplace only as described in this manual. Any other use may result in fire, electric shock, injury, or death.
- Use handles when moving the electric fireplace.
- This electric fireplace contains small parts that can be swallowed. Keep children away during assembly.
- This electric fireplace gets hot during operation. To avoid burns, DO NOT TOUCH hot surfaces.
- Combustible materials (e.g., furniture, cushions, bedding, paper, clothing, or curtains) must maintain the prescribed minimum distance from all sides of the electric fireplace. Ensure minimum clearances to combustible materials when building a mantel or shelves near the fireplace. Elevated temperatures on the wall or in the air around the fireplace may cause melting, discoloration, or damage to decorations, a television, or other electronic components.
- DO NOT insert foreign objects into ventilation or exhaust openings, as this may damage the electric fireplace, cause electric shock, or start a fire. DO NOT block air inlets or outlets in any way, as this may cause a fire.
- An electric fireplace produces arcing or sparking inside and gets HOT.
- DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored, or where combustible vapors are present.
- DO NOT use an electric fireplace on soft surfaces like a bed where openings may be blocked.
- AVOID FIRE HAZARD. It is essential to keep the control compartments, blower, and passage inside the fireplace clean. Regularly check all ventilation openings to ensure they are free from dust, fibers, or other blockages. Unplug the unit and clean it ONLY with a vacuum cleaner. DO NOT rinse or wet it.
- FOR INDOOR USE ONLY. ALWAYS store this electric fireplace in a dry place. NEVER use the fireplace where it can get wet. NEVER use this electric fireplace outdoors. Outdoor use may result in electric shock.
- DO NOT OPEN. Risk of electric shock. There are no user-serviceable parts inside.
- Do not install the fireplace against a vapor barrier or exposed insulation.
- NEVER use this electric fireplace in bathrooms, laundry rooms, or other locations where the electric fireplace may come into contact with water or high humidity.
- Ensure adequate safety measures are taken to prevent infants/toddlers from touching hot surfaces.

- Extreme caution is required when using an electric fireplace. NEVER leave the appliance unattended while the electric fireplace is in operation. DO NOT operate an electric fireplace if the cord is damaged, the electric fireplace is not functioning properly, has been dropped, or otherwise damaged. Dispose of the electric fireplace or have it checked by a certified professional. DO NOT place the cord in a walkway or where it can be overlooked. ONLY connect the device to a properly grounded outlet. ALWAYS plug the electric fireplace directly into a wall outlet. NEVER use an extension cord or a relocatable power tap (power strip). NEVER connect this electric fireplace to an old, cracked outlet or an outlet with loose wires or connections. Connecting this electric fireplace to a faulty outlet may cause the outlet to overheat or catch fire.
- Before initial use, check the plug connections. ENSURE the plug is securely inserted into the outlet. Faulty wall outlet connections or loose plugs can cause the outlet to overheat. NEVER hang this device directly under an electrical outlet on the wall.
- This product is not intended as a primary heat source. It serves solely as a supplemental heat source.
- NEVER modify this electric fireplace. Modifying the fireplace may result in injury or damage. Modifying this fireplace will void all warranties.
- ALWAYS turn off this electric fireplace before unplugging it.
- ALWAYS disconnect this device from the power supply before performing assembly, cleaning, or moving the electric fireplace.
- ALWAYS unplug this electric fireplace when not in use.
- Electric fireplaces consume more electricity than small electrical appliances. Overheating may occur, even if not experienced with other devices. Check during use if the outlet or cover is HOT. If the outlet or cover is HOT, discontinue use immediately and have a qualified electrician check and/or replace the faulty outlets.
- NOTE: This electric fireplace is designed for use in the EU and UK. Be sure to use power cords suitable for your region. Both power cords are included.
- This fireplace must not be modified under any circumstances.
- This product contains a glass panel. Always handle glass with care. Failure to heed this warning may result in personal injury or property damage.

TECHNICAL SPECIFICATIONS

MODELL-NR.: E01

MODEL No.: E01

Supply Voltage: AC 220–240 V 50 Hz

Maximum power consumption: 2000 watts

Power for flame effect: 6 watts

Power for ambilight: 10 watts

HEAT OUTPUT

Nominal heat output (P_{nom}): 2000 watts

Minimum heat output (indicative) (P_{min}): 1000 watts

Maximum continuous heat output (P_{max}): 2000 watts

AUXILIARY ELECTRICITY CONSUMPTION

Standby mode (eISB): 0,56 watts

NOISE LEVEL

Flame effect: 10 dB

Heating system: 45 dB

| TYPE OF HEAT OUTPUT / ROOM TEMPERATURE CONTROL | | |
|--|----------------------------|---|
| Single stage heat output and no room temperature control | No | |
| Two or more manual stages, no room temperature control | No | |
| With mechanic thermostat room temperature control | No | |
| With electronic room temperature control | Yes | |
| Electronic room temperature control plus day timer | Yes | |
| Electronic room temperature control plus week timer | Yes | |
| OTHER CONTROL OPTIONS | | |
| Room temperature control, with presence detection | Yes | |
| Room temperature control, with open window detection | Yes | |
| With distance control option | No | |
| With adaptive start control | No | |
| With working time limitation | No | |
| With black bulb sensor | No | |
| CONTROL BOARD | REMOTE CONTROL RECEIVER | REMOTE CONTROL TRANSMITTER |
| HARDWARE: ZD20593 SOFTWARE: 803A | HARDWARE: 20245B | HARDWARE: AXF-088 SOFTWARE: 01EF |



NOTE! The meaning of this figure is “DO NOT COVER”



 


 





NOTE! When using paint or varnish to paint the mantelpiece, the paint or varnish must be heat-resistant to prevent discoloration.

NOTE! Manufacturer and seller expressly disclaim any liability for personal injury, property damage or loss, whether direct, indirect or accidental, resulting from the incorrect attachment, improper use, inadequate maintenance or neglect of this product.

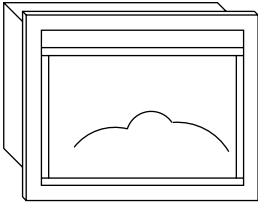NOTE! Any modification to the product or failure to observe the recommended care measures will invalidate the product warranty.

PARTS AND HARDWARE


- Unpacking the fire carefully, make sure that the appliance is intact with no signs of damage caused by transport and no part has been exposed to water. If in doubt, do not use the appliance and contact an authorised service centre.
- Keep plastic wrapping away from children.
- Save the original packaging as this may be required in the event of service complaint with product.
- Check that all parts are removed from the packing.

| | | | |
|---|--|--|---|
|  <p>1x</p> |  <p>1x</p> |  <p>2x</p> | |
| <p>Fireplace unit Remote control Battery</p> | | | |
| <p>G</p>  <p>12x</p> | <p>H</p>  <p>2x</p> | <p>I</p>  <p>1x</p> | <p>J</p>  <p>1x</p> |
| <p>Screw Securing element Securing element LED strip</p> | | | |
| <p>K</p>  <p>1x</p> | <p>L</p>  <p>3x</p> | <p>M</p>  <p>3x</p> |  <p>Manual</p> |
| <p>Cover für LED strip Screw Sleeve Manual</p> | | | |

NOTE! Tools required for installation (not included): Screwdriver.

APPLIANCE DIMENSIONS

UNIT: mm

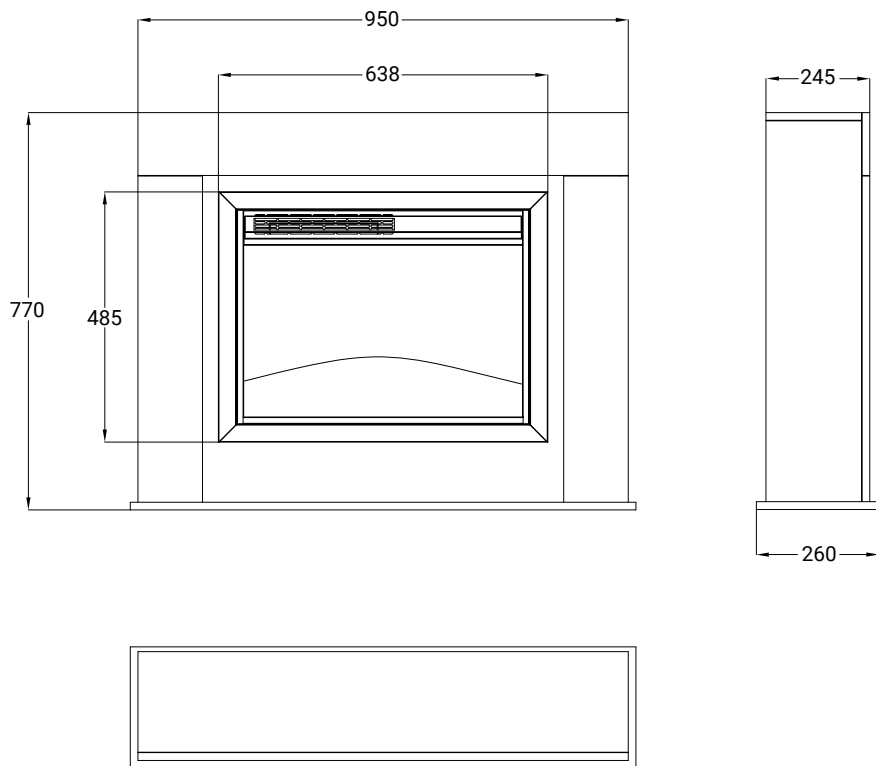

INSTALLATION INSTRUCTIONS

LOCATING THE APPLIANCE


The MATTI electric fireplace can be installed anywhere in enclosed spaces, provided the above safety instructions are observed.

Observe the minimum distances to obstacles and walls.

MINIMUM DISTANCES

Minimum distance to the left and right: 25 cm

 
Minimum distance to the front: 120 cm

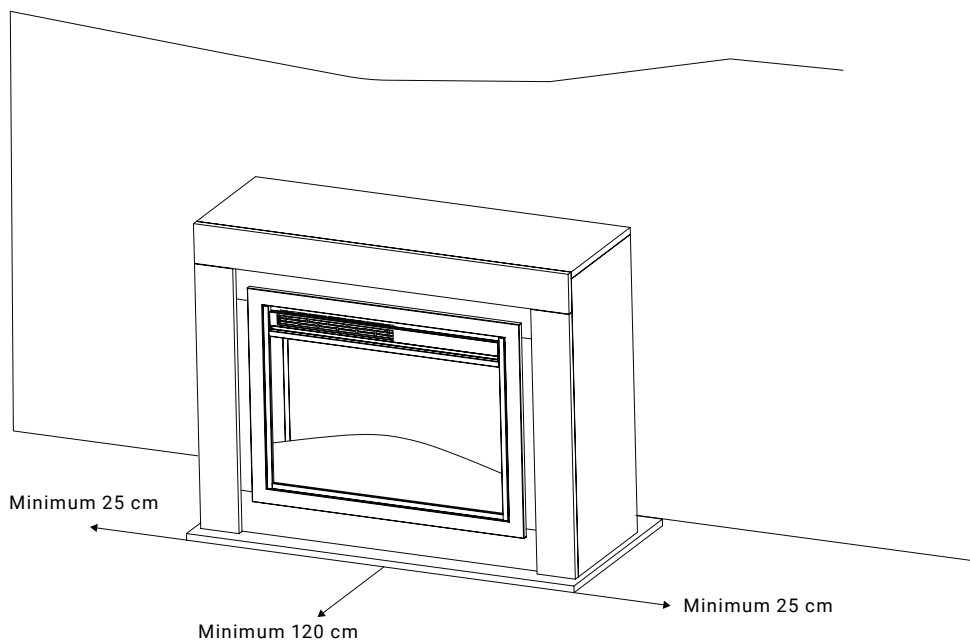

OPERATING

WARNING! Make sure that the fuse(s) for the power supply are switched on. As soon as the appliance is connected to a properly earthed socket, it is ready for operation; in the event of a power failure, the appliance loses its memory function and is reset to factory mode when it is switched back on.

MAIN SWITCH



The main switch is located at the top right of the front of the appliance.

The main switch must be switched on (-) before the appliance can be operated. The appliance emits a short beep to indicate that it is ready for operation. If no sound is heard, the appliance may not be plugged in, the fuse may have blown or there may be a fault. Switch off the main switch (o) to disconnect the power supply.





Operating modes

This electric fireplace can be operated via the CONTROL PANEL located on the top right-hand side of the fireplace or via the battery-operated REMOTE CONTROL. The operation and functions of both methods are the same.

DESCRIPTION AND FUNCTION

This product is an energy-efficient electric fireplace for heating the room air. It has heating elements that heat the room to the set temperature. The individual functions can be switched on and off directly using the control unit or the remote control supplied.

It has 2 heating levels, an adjustable timer, a realistic 3D flame effect, ambient lighting, open window detection and electrical overheating protection.

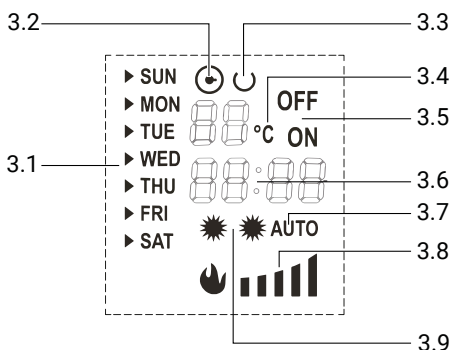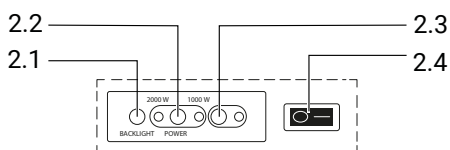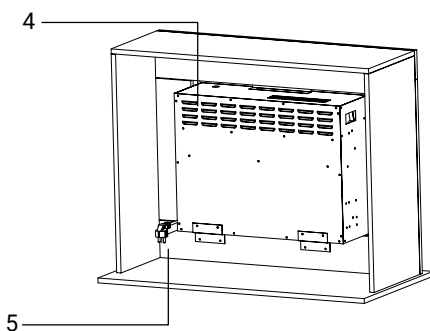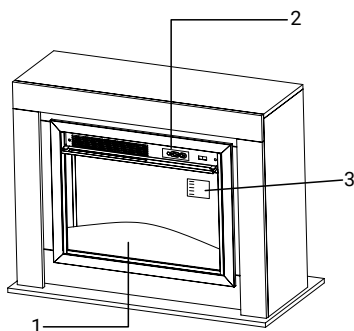


| NO. | DESCRIPTION |
|-----|---|
| 1 | Fireplace unit |
| 2 | Control panel |
| 2.1 | Ambient light |
| 2.2 | Switching between heating level 1 and 2 |
| 2.3 | Standby ON/OFF |
| 2.4 | Main switch ON/OFF |
| 3 | LCD display |
| 3.1 | Timer display: Selected day of the week |
| 3.2 | Timer display: ON/OFF |
| 3.3 | Display Standby |
| 3.4 | Temperature display in °C |
| 3.5 | Start/end time display ON/OFF |
| 3.6 | Operating time |
| 3.7 | Automatic mode ON/OFF display |
| 3.8 | Display brightness flame effect |
| 3.9 | Display of current heating level |
| 4 | Ventilation slots |
| 5 | Connection cable |

REMOTE CONTROL

 
NOTE: To improve operation, point the remote control at the front of the fireplace. Do not press the buttons too quickly. Give the appliance time to respond to each command input.



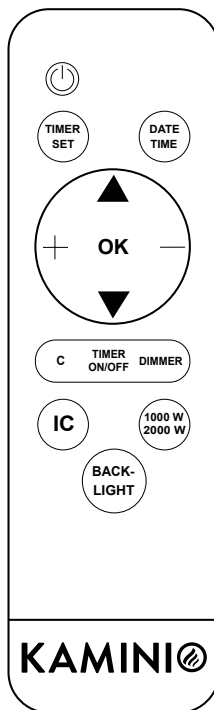

 
 




- Remove the battery cover from the back of the remote control.
- Pay attention to the positive and negative connections and carefully insert two ,AAA' batteries.
- Replace the battery cover.



WARNING: Do not mix old and new batteries; mixing batteries can cause the acid in the batteries to leak and damage the remote control. Never dispose of batteries in a fire. Failure to observe this precaution may result in an explosion. Dispose of batteries in the appropriate facilities.

CONTROL PANEL



| SWITCH | FUNCTION | ACTION AND DISPLAY |
|---|--|---|
|  | Switching the electric fireplace on/off | ON: Activates the function of the control panel and the remote control. Switches the flame effect on. OFF: Deactivates the function of the control panel and remote control. Switches the flame effect off. |
|  | Set timer | Controls the timer settings to switch the fireplace on and off automatically. |
|  | Set date and time | Sets the time and day of the week. |
|  | Multifunctional field | Automatic mode: +/- Increase/decrease temperature ▲ / ▼ Increase/decrease time OK: Confirm button +/- Add/remove weekday from selection ▲ / ▼ Set hour/minutes OK: Confirm button Set date and time: +/- Set hours/minutes ▲ / ▼ Set day of the week OK: Confirm button |
|  | Button for deleting the set values | Deletes the set value. |
|  | Timer function ON/OFF | Switches the timer ON and OFF. |
|  | Setting the brightness of the flame effect | Sets the desired brightness level of the flame effect. |
|  | Switch automatic mode on/off | Sets the automatic mode ON and OFF. |
|  | Switching between heating level 1 and 2 | Changes the heating level from level 1 (1000 watts) and level 2 (2000 watts). |
|  | Switching ambient lighting on/off | Switches the ambient lighting ON and OFF. |





INITIAL COMMISSIONING

1. Before connecting the appliance, ensure that the mains voltage and mains frequency of the appliance are identical to those of the mains supply.
2. Connect the power cable to a free, easily accessible socket.
3. Press the main switch [2.4] on the control panel [2] of the electric fireplace to the "1" position to switch the electric fireplace on.

Test the following functions before using the electric fireplace for the first time:

- The electric fireplace can be switched on and off using button [2.3].
- Press button [2.2] to switch between the 2 heating levels.
- Press button [2.1] to switch the ambient lighting on and off.

Test the individual functions using the supplied remote control:



- Pressing the  will turn the electric fireplace on and off.
- The automatic mode can be toggled on and off with the .
- The temperature can be adjusted using the +/- buttons.
- Pressing  will switch between the 2 heating levels.
- Pressing  will turn the ambient lighting on and off.

OPERATING

SWITCH ON AND OFF

1. Press the main switch [2.4] on the control panel [2] of the electric fireplace into the "1" position to switch the electric fireplace on.
2. Press the main switch [2.4] on the control panel [2] of the electric fireplace into the "0" position after use to switch the electric fireplace off.


AUTOMATIC MODE

1. Press  on the remote control to switch on automatic mode. The display shows "AUTO" [3.7].
2. In automatic mode, the electric fireplace measures the room temperature and adjusts the heat output depending on the measured room temperature (thermostat function).
3. Press "+/-" on the remote control to increase/decrease the desired temperature.
4. Press  on the remote control again to switch off automatic mode. The "AUTO" indicator [3.7] disappears from the display.




NOTE! The electric fireplace only starts heating to the desired temperature when this is 2 °C higher than the current room temperature.

NOTE! The temperature can be set within a range of 15 - 30 °C.




SELECT HEATING LEVEL

Press  on the remote control or button [2.2] on the control panel [2] to switch between heating levels 1 and 2. The currently selected heating level is indicated by a signal lamp [2.2] on the control panel [2] and by the indicator [3.9] on the display.

SETTING AMBIENT LIGHTING AND FLAME EFFECT



1. Press  on the remote control or button [2.1] on the control panel [2] to switch on the ambient lighting.
2. Press  on the remote control again to switch between the different colors and switch off the ambient lighting.
3. If required, press  on the remote control to switch between the 5 selectable brightness levels of the flame effect. The display shows the brightness of the flame effect [3.8], represented by a 5-bar display. The lowest number of bars displayed represents the lowest brightness and the highest number represents the maximum brightness.

SET DATE AND TIME

1. Press  on the remote control.
2. Set the current day of the week using ▲/▼.
Refer to the following overview of the days of the week:
 - SUN = Sunday
 - MON = Monday
 - TUE = Tuesday
 - WED = Wednesday
 - THU = Thursday
 - FRI = Friday
 - SAT = Saturday
3. Press  on the remote control again.
4. Set the current hour using "+/-".
5. Press  on the remote control again.
6. Set the current minutes using "+/-".
7. Press "OK".

The day of the week and the time are set.






SETTING THE TIMER

1. Press  on the remote control.
2. Select the desired program number using ▲/▼, where the timer settings should be saved.
3. Press  on the remote control again.
4. Select the day of the week using ▲/▼.

The selected day of the week will be marked ► on the display.

 
 
5. Press “+” on the remote control to add the day of the week to the selection.

NOTE! You can add multiple days of the week to the selection by selecting and pressing “+”.


6. Press “-” on the remote control if needed to remove the day of the week from the selection.
7. Press  on the remote control again.
8. Set the hours of the operating duration using ▲/▼.
9. Press  on the remote control again.
10. Set the minutes of the operating duration using ▲/▼.
11. Press  on the remote control again.
The display will show the message “OFF” [3.5].
12. Set the hour of the heating start time using ▲/▼.
13. Press  on the remote control again.
14. Set the minutes of the heating start time using ▲/▼.
15. Press  on the remote control again.
16. Set the desired temperature using ▲/▼.
17. Press “OK”.

The timer has been programmed.

ACTIVATE TIMER

1. Press  on the remote control to activate the preset timer.
The timer display [3.2.] appears on the display.
2. Press  on the remote control again to deactivate the preset timer. The timer indicator [3.2.] disappears from the display.

PUT THE DEVICE OUT OF OPERATION

1. Press to switch  the electric fireplace.
2. Press the main switch [2.4] on the control panel [2] of the electric fireplace to the "O" position after use to switch off the electric fireplace.
3. Pull the mains plug out of the socket. The electric fireplace is switched off.

OVERHEAT PROTECTION

This electric fireplace is equipped with a temperature limit control. If the electric fireplace reaches an unsafe temperature, it will automatically shut off.

RESETTING

1. Turn the main power switch OFF (o).
2. Unplug the power cord from the outlet.
3. Wait for at least 1 minute before plugging the device back in.
4. Turn on the main power switch and press the POWER button to restart the device.
5. If the device does not turn on, allow it to cool completely and check the fireplace to ensure no ventilation openings are blocked or clogged with dust or lint. If they are, use a vacuum cleaner to clean the ventilation areas.
6. If the issue persists, have your outlet and wiring checked by a professional.

NOTE! When the electric fireplace is turned on for the first time, a slight odor may occur. This is normal and should only recur if the electric fireplace has not been used for an extended period.

CLEANING

WARNING! Before performing any maintenance or cleaning on the outside of the fireplace, the device must be disconnected from the power supply and allowed to cool down completely.

METAL:

- Use a soft, lint-free cloth and a mild non-abrasive cleaning agent for cleaning.
- DO NOT USE polish or household cleaners, as these products can damage the metal finish.

GLASS:

- Use a high-quality glass cleaner sprayed onto a cloth or towel. Dry thoroughly with a paper towel or a soft, lint-free cloth.
- NEVER USE abrasive cleansers, liquid sprays, or any cleaner or cloth that could scratch the surface.

VENTILATION SLOTS:

- Use a vacuum cleaner or cloth to remove dust and dirt from the ventilation slots.
- Clean the outside of the fireplace with a slightly damp cloth.

WARNING! ALWAYS turn off the electric fireplace and unplug it from the outlet before cleaning, performing maintenance, or moving it. Failure to do so could result in electric shock, fire, or personal injury. NEVER immerse the fireplace in water or spray it with water. Doing so could result in electric shock, fire, or personal injury.

MAINTENANCE

WARNING! The consumer should not perform any further maintenance. Do not perform maintenance on the device yourself.

ELECTRICAL AND MOVABLE PARTS:

- The fan motors are lubricated at the factory and do not require additional lubrication.
- Electrical components are integrated into the fireplace and cannot be serviced by the consumer.

STORAGE:

- Store the electric fireplace in a clean, dry place when not in use.

VENTILATION SLOTS:

- Use a vacuum cleaner or dust cloth to remove dust and dirt from electric fireplaces and ventilation slots.
- Clean the exterior of the electric fireplace with a slightly damp cloth.
- Keep the ventilation slots clean.
- Regularly check that the ventilation slots are free from debris.
- Follow cleaning instructions in case of dirt.